MOM2

Micro-ohmmeter



- Up to 220 A
- Battery supplied
- Lightweight 1 kg
- Safe test DualGround™
- Auto range: 1 μΩ to 1000 mΩ
- Bluetooth® PC communication
- Complies with IEEE and IEC standards

DESCRIPTION

The MOM2 is designed to measure the resistance of circuit breaker contacts, bus-bar joints and other high-current links. This product is designed with safety, ease of use and versatility in mind.

The micro-ohmmeter can be used anywhere to measure a low resistance value with high accuracy.

MOM2 uses an ultra capacitor to generate the high output current. The ultra capacitor is able to store a huge amount of energy compared to conventional capacitors and can deliver very high current during the discharge thanks to its very low internal resistance.

While testing, the capacitor is discharged through the test object and the voltage drop across- and the current flow through the test object are continuously and synchronously sampled. The resistances calculated from the individual samples are then averaged to obtain the final value.

With MOM2 it is possible to make measurements according to the DualGround™ method. This means that the test object will be grounded on both sides throughout the test giving a safer, faster and easier workflow.

The ruggedness and lightweight makes MOM2 a handheld instrument very suitable for field work, such as in substations. The unit comes with a strong rubber holster accessory which makes it extra durable. MOM2 is dimensioned to make a full day's work of testing without recharge. It can store 190 test values and transfer test data to a PC via Bluetooth.

APPLICATIONS

MOM2 test system is designed to serve a number of applications. The most common are contact resistance measurements of low-, medium- and high-voltage breakers and also at bus-bar joints, and other high current links.

If the contact resistance is too high this will lead to power loss and temperature rise, which often leads to serious trouble. To avoid such problems, it is necessary to check the resistance at regular intervals.

The following table demonstrates how important low resistance is at high currents:

| Current | Contact resistance | Power loss |
|---------|--------------------|------------|
| 10 kA | 1 mΩ | 100 kW |
| 10 kA | 0.1 mΩ | 10 kW |
| 1 kA | 1 mΩ | 1 kW |
| 1 kA | 0.1 mΩ | 100 W |

At 10 kA a contact with the resistance 0.1 m Ω gives a power loss of 10 kW. This power loss in one single point will definitely confer a temperature rise, which may result in overheating and possibly premature failure.

FEATURES AND BENEFITS

- 1. Current output terminal (-)
- 2. Current output terminal (+)
- 3. Display


The display offers a combination of analogue arc and a dual digital readout:

- Analogue arc:
- Indicates level of the capacitor charge.
- Dual digital display:
- Large main digital readout for good visibility of all main measurement results
- Second digital display for additional data.
- 4. Ground (earth) terminal
- 5. Keys for navigation and to make settings in the display
- 6. TEST-button
- 7. Stand-by/Wake up (Press shortly to toggle) Clear log (Press and hold for 5 seconds)

8. Function selector

| OFF | | | | |
|-----------|-----------------------|-------------------------------------------------------------------------------------------------|--|--|
| I > I min | 0.1 s 0.6 s 3 s | Measurement time with minimum current guarantee | | |
| I = I max | 0.1 s 0.6 s 3 s | Measurement time with max. charge | | |
| | * | Bluetooth "pair units" | | |
| SET | CLK | Set date and time Set volume for the internal loudspeaker Discharge the MOM2 internal capacitor | | |
| | I min | Minimum current guarantee setting | | |
| | LOG | Data log setings | | |
| | P/F | Pass/Fail settings | | |
| PC COM | | PC communication (dump data to PC) | | |
| USER | 1 2 3 | Stored settings. Set from PC, MOM2 Win | | |

- 9. Connector for the voltage (-) sense lead
- 10. Connector for the voltage sense (+) lead and the trig function
- 11. Connector for the battery charger
- 12.Battery charger indicator

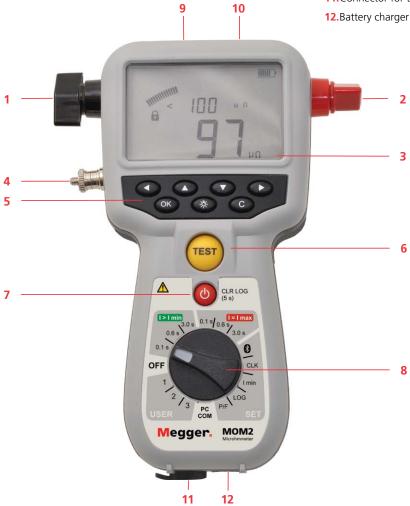

APPLICATION EXAMPLES

Circuit Breaker testing

- Test of circuit breaker contacts
- Test of the connections to the breaker

Testing of Bus-bar


- Test of Bus-bar joints
- Test of connections

Everywhere you need to test a low resistance/ high current connection

- Switches
- Disconnecting devices
- Safety ground connections
- Welding points
- Fuses
- Cables



Hold probes / attach Kelvin clamps to CB and press trig / TEST button. A signal indicates whether test was pass or fail and result is logged in unit for later dump to PC.

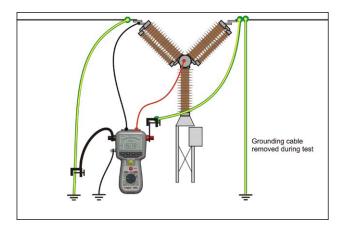

Traditional measurement from ground. Injection is done through existing grounding cable (earthing). Use any of the optional cable kits, GA-00380/82/84, with 5, 10 or 15 m cables.


BOTH SIDES GROUNDED

Many utilities require safety grounds to remain in place during station outages, therefore, the MOM2 was designed with this field safety constraint in mind. DualGround means that the test object will be grounded on both sides throughout the test giving a safer, faster and easier workflow. Minimum time shall be spent in the substation and focus shall be on the test rather than the equipment.

| Conventional vs. DualGround | | | | |
|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------|--|--|--|
| Site preparation (isolate work area, apply safety ground, issue permit to work) | Site preparation (isolate work area, apply safety ground, issue permit to work) | | | |
| Hook up test equipment. Issue sanction for test | Hook up test equipment. Issue sanction for test | | | |
| Authorised person removes the ground | Risky step left out | | | |
| Perform testing | Safe testing with both sides grounded | | | |
| Authorised person applies ground | Risky step left out | | | |
| Cancel sanction for test. Disconnect test equipment | Cancel sanction for test. Disconnect test equipment | | | |
| Site closing (cancel permit to work, disconnect ground) | Site closing (cancel permit to work, disconnect ground) | | | |




Equipment and methods that supports DualGround™ testing are associated with the DualGround symbol. This symbol certifies the use of groundbreaking technology and methods that enables a safe, fast and easy workflow with both sides grounded throughout the test.

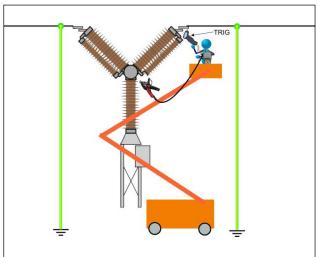

Measurement on CB with both sides grounded, DualGround. Here is a combination of one clamp and one probe used.

4 WIRE KELVIN TEST

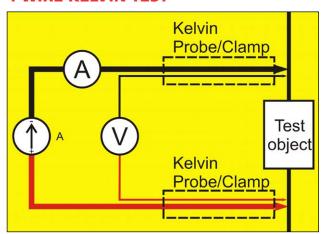

The Kelvin probes (incl. in BD-59090) are used for a 4 wire Kelvin test. This is a way of measuring continuity resistances ensuring all contact and lead resistances are compensated for, which allows a much greater accuracy in measurements. Each Kelvin probe assembly has two probe tips. One tip is for the current generated and the other will measure the very small voltage present.

The Kelvin clamps (incl. in BD-59092) uses the same principle.



The "double" probe tip showing the springy center tip.



MOM2 (BD-59092) with Transport case, Charger, Kelvin clamps, Rubber holster, Carrying strap, Belt clip, MOM2 Win.



SPECIFICATIONS

Specifications are valid at fully charged batteries and an ambient temperature of +25°C, (77°F). Specifications are subject to change without notice.

Environment

Application field For use in high-voltage substations

and industrial environments.

Temperature

Operation -20°C to $+50^{\circ}\text{C}$ (-4°F to $+122^{\circ}\text{F}$) *)

Storage -40°C to $+70^{\circ}\text{C}$ (-40°F to $+158^{\circ}\text{F}$)

Relative humidity %RH 5%-95%, non condensing

Pollution degree 2

ShockIEC 60068-2-27VibrationIEC 60068-2-6TransportISTA 2A

CE-marking

EMC 2004/108/EC LVD 2006/95/EC

General

Battery power Five AA (HR6) 2700 mAh NiMH cells

Recharge time < 12 h
Typical recharge time at 3 h

25°C

Battery charger

Mains voltage 100 - 250 V AC, 50 / 60 Hz

Power consumption 60 W

Protection Against wrong battery type, low/high

temperature.

Real time clock battery life ≥10 years

Audible feedback Different buzzer sounds

User presets 3
Field calibration Yes
Encapsulation IP54

Dimensions (excl. binding posts) 217 x 104 x 72 mm 8.5 x 4.1 x 2.8 in.

Weight 1.0 kg (2.2 lbs) instrument only

5.0 kg (11 lbs) with accessories and

carrying case

Measurement section

 $\begin{tabular}{lll} \textit{Minimum current guar-} & Selectable 50 A / 100 A \\ \textit{valid at resistance} \le 2m\Omega \\ \textit{Pass / Fail} & Settable from 1 $\mu\Omega$ to 1999 $m\Omega$ \\ \textit{Number of measurements} & typ. 2200 at I min = 50 A and 0.1 s \\ \textit{on fully charged batteries} & typ. 800 at I min = 100 A and 0.1 s \\ \end{tabular}$

Interference suppression Yes

Range $0 - 1000 \text{ m}\Omega$

Range selection Auto

Resolution

0 – 999 $\mu\Omega$ 1 $\mu\Omega$ 1.0 – 9.99 $m\Omega$ 0.01 $m\Omega$ 10.0 – 99.9 $m\Omega$ 0.1 $m\Omega$ 100 – 1000 $m\Omega$ 1 $m\Omega$

Inaccuracy

 $0-1999 \, \mu\Omega$ ±1 % of reading ±1 digit $2-500 \, m\Omega$ ±2 % of reading ±1 digit $500-1000 \, m\Omega$ ±4 % of reading ±1 digit

Outputs + / -

 $Range > 100 \text{ A DC } (R < 2 \text{ m}\Omega)$

Output voltage (max) 2.5 V DC

Generation duration Selectable: 0.1 s, 0.6 s, 3 s

| | | Recovery time at I min set to 100 A and load 100 $\mu\Omega$ | |
|-----------------|-------|--------------------------------------------------------------|--|
| Generation time | Max | Тур | |
| 0.1 s | 10 s | 8 s | |
| 0.6 s | 20 s | 16 s | |
| | 130 s | 100 s | |

Inputs

SENSE + / -

Connector 4 mm banana jack

Voltage ±3 V DC

Trigger input Threshold 8 V DC

DC IN 12 – 24 V DC, 2 A max

Logger

Logger, Data Label. Timestamp, I max, I min, I Limit,

Resistance, Meas.time, P/F limit

Labeling schemes Circuit breaker oriented or running

numbers

Capacity 190 measurements

Wireless communication

HeadsetBluetoothPC communicationBluetooth

^{*)} Battery operation temperature 0°C to +50° (32°F to +122°F) Battery charging temperature +10°C to +40° (50°F to +104°F)

ACCESSORIES



Test cables with Kelvin probes (incl. in BD-59090)



Test cables with Kelvin clamps (incl. in BD-59092)

OPTIONAL ACCESSORIES



Calibration kit



Bluetooth headset



Bluetooth dongle



Connection plate, used together with the cable kits.



Soft carrying case

| ORDERING INFORMATION | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| Item | Art. No. |
| MOM2 Incl. Charger, MOM2 Win | BD-59000 |
| MOM2 Incl. 2 x 1.3 m (4 ft) test cables with Kelvin probes (one with trig button) Transport case, Charger, Rubber holster, Carrying strap, Belt clip, MOM2 Win | BD-59090 |
| MOM2 Incl. 1.3 m (4 ft) test cable red with Kelvin clamp 3 m (10 ft) test cable black with Kelvin clamp Transport case, Charger, Rubber holster, Carrying strap, Belt clip, MOM2 Win | BD-59092 |
| MOM2 Incl. 1.3 m (4 ft) test cable red with Kelvin clamp 5 m (16 ft) test cable black with Kelvin clamp Transport case, Charger, Rubber holster, Carrying strap, Belt clip, MOM2 Win | BD-59093 |
| Optional accessories | |
| Test cables with Kelvin probes (current & sense) 2 x 1.3 (4 ft) m (one with trig button) | GA-90000 |
| Test cables with Kelvin clamps (current & sense) 1.3 m (4 ft) red, 3 m (10 ft) black | GA-90001 |
| Current cable with Kelvin clamp 3 m (10 ft) black, 16 mm² | GA-00372 |
| Current cable with Kelvin clamp 1.3 m (4 ft) red, 16 mm ² | GA-00373 |
| Current cable with Kelvin clamp 5 m (16 ft) black, 25 mm² | GA-00374 |
| Current cable with Kelvin clamp 10 m (33 ft) black, 16 mm² | GA-00376 |
| Cable kit 5 m (for use with the std. ground connectors) Current cable 0.5 m (1.6 ft), Connection plate and sense cables 5 m (16 ft), Ground cable | GA-00380 |
| Cable kit 10 m Current cable 0.5 m (1.6 ft), Connection plate and sense cables 10 m (33 ft), Ground cable | GA-00382 |
| Cable kit 15 m Current cable 0.5 m (1.6 ft), Connection plate and sense cables 15 m (49 ft), Ground cable | GA-00384 |
| Bluetooth kit Bluetooth headset and dongle for PC | XC-06000 |
| Calibration kit | BD-90002 |
| Soft carrying case | 50-30002 |
| For MOM2, Charger and Cables | GD-00620 |

Postal address

Megger Sweden AB Box 724 SE-182 17 Danderyd **SWEDEN**

T. 08 510 195 00 E. seinfo@megger.com

MOM2_DS_en_V11a

Printed matter: Art.No. ZI-BD03E ■ Doc. BD0336KE ■ 2016 Subject to change without notice

Registered to ISO 9001 and 14001 The word 'Megger' is a registered trademark

